



Updating ClareVision Plus Camera and NVR Firmware Product Bulletin

Last modified: 01/06/21

Introduction

To ensure an accurate performance, keep your ClareVision Plus camera and NVR firmware up to date. New features and functions are only accessible when using the latest firmware versions.

Updating firmware

Follow the steps below to update your ClareVision Plus firmware.

Note: You will need the ClareVision Plus App.

To update your firmware:


1. Open the ClareVision Plus App on your Android smartphone or iOS device.
A list of CCTV devices displays.
2. A blue dot appears next to the name of a CCTV device, indicating the device needs attention.

Note: The blue dot indicates that a firmware update is available, but may also indicate another device status issue that requires attention.



3. Tap the camera/NVR's name.

The page displays the camera/NVR's settings. If a newer firmware is available, the blue dot appears next to the device version.

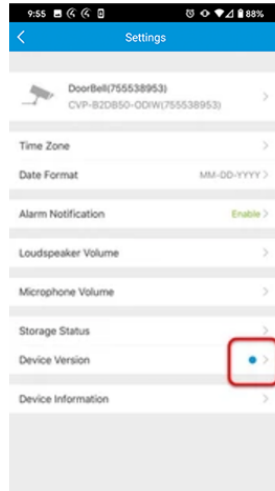

4. Tap **Device Version**, and then tap **Upgrade**.



The camera/NVR now has the current firmware and access to the newest features and improvements.

Contact information

Clare Controls, LLC.
7519 Pennsylvania Ave, Suite 104
Sarasota, FL 34243

General: 941.328.3991
Fax: 941.870.9646
www.clarecontrols.com

Integrator/Dealer Support: 941.404.1072
claresupport@clarecontrols.com

Homeowner Support (ClareCare): 941.315.2273 (CARE)
help@clarecontrols.com